

Code 3072-J

100 Test Strips



QAC

Insta-Test[®] ANALYTIC



Immerse pad in solution for 10 seconds.


SHAKE OFF EXCESS WATER.

Compare pad to color chart.

- Sample must be at room temperature (above 75°).

- Keep out of sunlight.

- Keep vial closed when not in use.

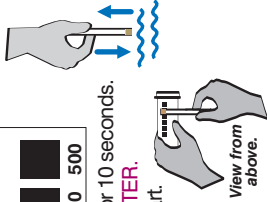

Code 3072-J



LaMotte Company
Chestertown, MD 21620 USA
www.lamotte.com

