


# Use of Mini Buffer Tablets with a pH Meter

**1.**

20 mL  
distilled  
water

Place 20 mL of distilled or deionized water in a small container.

The solution must be deep enough to cover the glass bulb of the electrode.

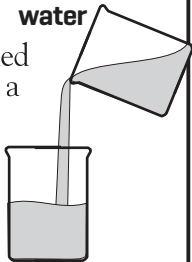

**2.**

Add one Mini Buffer Tablet.



**3.**

Stir until the tablet is completely disintegrated.



**4.**

Follow the calibration procedure in the pH meter manual. Buffer must be prepared fresh daily.