


Code 3000

Peracetic Acid




Insta-Test[®] ANALYTIC

50 Test Strips



Using a cup-size sample, immerse strip and remove with **pad face up**. **DO NOT SHAKE OFF EXCESS WATER**. Wait 10 seconds and compare to color chart. Discard strip after 30 seconds.

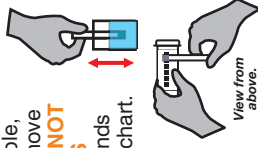

- Keep wet fingers out of the bottle.
- Cap bottle tightly after removing strip.
- Store in a cool, dry place.



LaMotte Company
802 Washington Ave., Chestertown, MD 21620 USA
410-778-3100 • www.lamotte.com

