


Insta-[®] TEST

Salt (Sodium Chloride)
Cloruro de sodio
Chlorure de sodium

10 Test Strips
Tiras Reactivas
Bandelettes d'Analyse

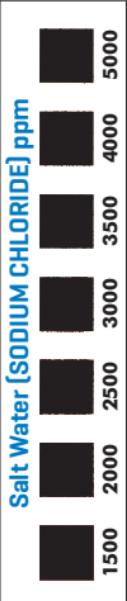

Dip pad into sample and immerse for 2 seconds. Remove strip with pad face up. DO NOT SHAKE OFF EXCESS WATER. In shade, hold pad level for 20 seconds and read the strip. Discard strip after 30 seconds.

- Keep out of direct sunlight during testing.
- Keep wet fingers out of the bottle.
- Close vial tightly after removing strip.
- Store indoors in a cool, dry, dark place.

Sumerge la tira en la muestra durante 2 segundos. Retirela con el lado coloreado hacia arriba. NO SACUDA EL EXCESO DE AGUA. Mantenga la tira horizontal a la sombra por 20 segundos y haga la lectura. Descarte la tira después de 30 segundos.

- No exponga la tira al sol durante la prueba.
- No toque el envase con los dedos húmedos.
- Cierra bien el envase luego de sacar la tira.
- Guarda el envase en un lugar frío, seco y oscuro.

Immerger pour 2 secondes dans l'échantillon d'eau. Retirer la bande face vers le haut. NE PAS SECOUER. A l'ombre, garder le niveau de la bande pour 20 secondes et lire. Jeter la bande après 30 secondes.

- Garder hors du soleil durant l'analyse.

• Ne pas introduire les doigts trempés dans la bouteille.

• Refermer le capuchon.

• Entreposer dans un endroit frais, sec et ombragé.

LaMotte Company
802 Washington Avenue, Chestertown, MD 21620 USA
www.lamotte.com/insta

Code 2998
Made in
USA



1