

Code 2999LR


Chlorine Dioxide  **LaMotte**

50 Test Strips

Insta-Test[®] ANALYTIC



Using a cup-size sample, immerse strip for **2 seconds**. Remove strip with **pad face up**. **DO NOT SHAKE OFF EXCESS WATER**. Compare to color chart immediately. Discard strip after 30 seconds.

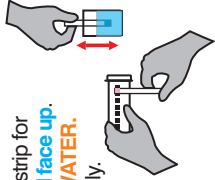

- Keep wet fingers out of the bottle.
- Cap bottle tightly.
- Store in a cool, dry place.



LaMotte Company
802 Washington Ave., Chestertown, MD 21620 USA
410-778-3100 • www.lamotte.com

