

Code 3000LR

Low Range
Peracetic Acid




50 Test Strips

Insta-Test[®] ANALYTIC

Low Range Peracetic Acid



Using a cup-size sample, immerse strip. Remove with **pad face up. DO NOT SHAKE OFF EXCESS WATER.** With pad still facing up, **wait 10 seconds and compare to color chart.** Discard strip after 30 seconds.

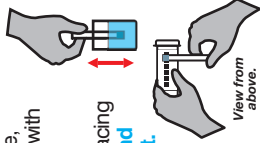

- Keep wet fingers out of the bottle.
- Cap bottle tightly after removing strip.
- Store in a cool, dry place.



LaMotte Company
802 Washington Ave., Chestertown, MD 21620 USA
410-778-3100 • www.lamotte.com



Drop holding box and dotted tolerance line