

Code 3002

High Range
Chlorine Dioxide
50 Test Strips




Insta-Test[®] ANALYTIC

High Range Chlorine Dioxide



Using a cup-size sample,
immerse strip for **2 seconds**.
Remove strip with **pad face
up. DO NOT SHAKE OFF
EXCESS WATER.** With pad
still facing up, **wait 10 seconds
and read the
strip.** Discard strip after
30 seconds.

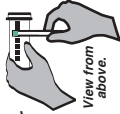

LaMotte Company
Chestertown, MD 21620
www.lamotte.com

- !Keep wet fingers out of the bottle.
- !Cap bottle tightly.
- !Store in a cool, dry place.
- !In concentrations greater than 500 ppm the pad will be a mottled color of golden-brown and black.

