

Code 3023-G

25 Test Strips



Ammonia
Fresh and Salt Water

Insta-Test[®] ANALYTIC

NH₃ • Ammonia ppm • Fresh and Salt Water




Immerse strip for 5 seconds.

Remove with **pad face up**.

**DO NOT SHAKE OFF
EXCESS WATER.**

Wait 60 seconds.

Compare to color chart.

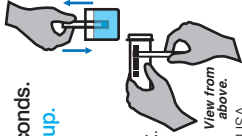

- Keep wet fingers out of the vial.
- Close vial tightly.
- Store in a cool, dry place.

LaMotte Company
Chester town, Maryland 21620 USA
www.lamotte.com



6

37385

46305

1

Drop holding box and dotted tolerance line