



LAUNDRY CONTROL KIT

CODE 3095-02


QUANTITY	CONTENTS	CODE
60 mL	*Hypochlorite Indicator	*6434-H
60 mL	Hypochlorite Reagent C	7941PS-H
30 mL	Nitro Green Indicator	2301-G
15 mL	*Hardness Reagent #5	*4483-E
15 mL	*Hardness Reagent #6	*4485-E
60 mL	Hardness Reagent #7	4487PS-H
15 mL	*Phenolphthalein Indicator, 1%	*2246-E
15 mL	Methyl Orange Indicator	2230-E
60 mL	*Hydrochloric Acid, 1.0 N	*6130PS-H
60 mL	*Hydrochloric Acid, 0.1 N	*6323-H
60 mL	Sour Indicator	6432-H
1	Test Tube, hardness, w/cap	4488
2	Test Tubes, 5-10-12.9-15-20-25 mL, glass, w/cap	0608
3	Test Tubes, 5.0 mL, glass, w/cap	0230
1	Test Tube, round bottom, glass	0240
1	Nitro Green Octa-Slide 2 Bar	2197-01
1	Octa-Slide 2 Viewer	1011
2	Test Tubes, 2.5-5-10 mL, plastic, w/caps	0106
1	Pipet, glass, 20 dr/mL	0342
4	Pipets, plain, plastic, w/caps	0392
1	Pipet Assembly, 0.5 mL, plastic, w/cap	0369

*WARNING: Reagents marked with an * are considered to be potential health hazards. To view or print a Safety Data Sheet (SDS) for these reagents go to www.lamotte.com. Search for the four digit reagent code number listed on the reagent label, in the contents list or in the test procedures. Omit any letter that follows or precedes the four digit code number. For example, if the code is 4450WT-H, search 4450. To obtain a printed copy, contact LaMotte by email, phone or fax.

Emergency information for all LaMotte reagents is available from Chem-Tel: (US, 1-800-255-3924) (International, call collect, 813-248-0585)

To order individual reagents or test kit components, use the specified code number.

USE OF THE OCTA-SLIDE 2 VIEWER

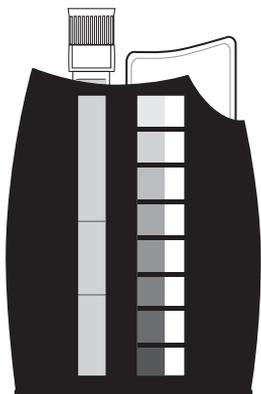

The Octa-Slide 2 Viewer should be held so non-direct light enters through the back of the Viewer. Insert the Octa-Slide 2 Bar into the Viewer. Insert the reacted sample into the top of the Viewer. Match the color of the reaction to the color standards.

PROCEDURE

ALKALINE [HIGH] pH

1. Insert the Nitro Green Octa-Slide 2 Bar (2197-01) into the Octa-Slide 2 Viewer (1101).
2. Fill a test tube (0106) to the 10.0 mL line with the sample water.
3. Add 8 drops of Nitro Green Indicator (2301). Cap and mix.
4. Insert the test tube into the Octa-Slide 2 Viewer.
5. Match the sample color to a color standard. Record as pH.

SOUR [LOW] pH

1. Fill a test tube (0230) to the 5.0 mL line with the sample water.
2. Add 8 drops of the Sour Indicator (6432). Cap and mix.
3. Match sample color to a color standard. Compare with the table below. Record the pH.

Color	pH
Red Orange	1.5
Orange	2.0
Yellow	3.0
Yellow	4.0
Green Yellow	4.5
Yellow Green	5.0
Green	6.0
Gray Green	7.0
Blue	8.0
Bright Violet	8.5

ALKALINITY, BREAK, & SUDSING

1. Fill a test tube (0608) to the 25 mL line with the sample water.
2. Add 3 drops of *Phenolphthalein Indicator, 1% (2246). If a red color develops, active alkali is present. Proceed to step 3. If no red color appears, skip step 3 and go to step 4.
3. Use a clean pipet with cap (0392) to add *Hydrochloric Acid, 1.0 N (6130PS) to the sample, one drop at a time, while counting the drops. Continue addition, swirling to mix after each drop, until the red color disappears.
4. $\text{Number of Drops} \times 100 = \text{ppm Active Alkalinity as ppm CaCO}_3$
5. To the same sample, add 3 drops of Methyl Orange Indicator (2230). Mix.
6. Again add *Hydrochloric Acid, 1.0 N (6130PS), one drop at a time, until the yellow color changes to red orange.
7. $\text{Number of Drops} \times 100 = \text{ppm Inactive Alkalinity}$
8. To calculate the Total Alkalinity:
9. $\text{Total Number of Drops} \times 100 = \text{Total Alkalinity in ppm CaCO}_3$

ALKALINITY, RINSE

1. This test should be run on the supply tap water first and then on the rinse water to compare the two Alkalinity readings. If the rinse water is within 30 ppm of the tap water, the rinsing is sufficient. If the difference is greater than 30 ppm additional rinsing is needed.
2. Fill a test tube (0608) to the 25 mL line with the sample water.
3. Add 3 drops of *Phenolphthalein Indicator (2246). If a red color develops, active alkali is present. Proceed to step 4. If no red color appears, skip step 4 and go to step 5.
4. Use a clean pipet with cap (0392) to add *Hydrochloric Acid, 0.1 N (6323) to the sample, one drop at a time, counting the drops. Continue addition, swirling to mix after each drop, until the red color disappears.

Number of Drops x 10 = ppm Active Alkalinity

5. To the same sample, add 3 drops of *Methyl Orange Indicator (2230). Mix.
6. Again add *Hydrochloric Acid, 0.1 N (6323), one drop at a time until the yellow color changes to red orange.

Number of Drops x 10 = ppm Inactive Alkalinity

7. To calculate Total Alkalinity:

Total Number of Drops x 10 = Total Alkalinity in ppm CaCO₃

HARDNESS

Test results are expressed as Total Hardness in parts per million (ppm) or grains per gallon (gpg) Calcium Carbonate (CaCO₃).

To receive results in ppm, fill tube to upper line.

To receive results in gpg, fill tube to middle line.

If the hardness level is above 200 ppm, fill tube to lower line.

NOTE: 1 gpg = 17.1 ppm

1. Fill the tube (4488) to the desired line (see above) with the sample water.
2. Add five drops of *Hardness Reagent #5 (4483). Cap and mix.
3. Add five drops of *Hardness Reagent #6 (4485). Cap and mix. Solution will turn red.
4. Use the pipet (0392) to add Hardness Reagent #7 (4487PS), one drop at a time, swirling the tube between each addition. Hold the pipet vertically to form uniformly-sized drops. Count each drop added. Continue adding drops until the red color changes to a clear blue.
5. To determine the Total Hardness test result, multiply the number of drops added in Step 4 by:

10 ppm CaCO₃ (test tube filled to upper line)

1 gpg CaCO₃ (test tube filled to middle line)

20 ppm CaCO₃ (test tube filled to lower line)

BLEACH

1. Use the glass pipet (0342) to add exactly 5 drops of the water sample to one of the small test tubes (0230).
2. Use the 0.5 mL pipet with screw cap (0369) to add 0.5 mL of *Hypochlorite Indicator (6434). Solution will turn brown.
3. Use a clean pipet (0392) to add Hypochlorite Reagent C (7941PS), one drop at a time, while mixing and counting the drops. Continue until the brown or yellow color turns colorless. Hold pipet vertically.

Number of Drops x 0.1 = % Available Chlorine Bleach

TURBIDITY

1. This test measures the progressive amount of soil removed in each operation.
2. Fill one of the large, round bottom test tubes (0240) with the water sample. Allow to stand until the bubbles and suds have disappeared. Hold the tube in front of standard printed type such as these instructions or a newspaper. If the words can be read through the sample, then the solution is free of soil. If the words cannot be read, additional rinsing operations are required.

LaMOTTE COMPANY

Helping People Solve Analytical Challenges

802 Washington Ave · Chestertown · Maryland · 21620 · USA
800-344-3100 · 410-778-3100 [Outside USA] · Fax 410-778-6394

Visit us on the web at www.lamotte.com

©2020 LaMotte Company | 63095-02 | 2.21