

BEFORE FIRST USE

- Fully charge battery using the Spin Touch USB cable and adapter plug in AC outlet.
- Ensure your Spin Touch has the latest firmware:
 1. Download and install the WaterLink® Connect application for Windows® at <http://softwarecenter.lamotte.com/>.
 2. Plug meter into the computer with the provided USB cable and launch WaterLink® Connect application from the Start Menu.
 3. Any firmware updates will automatically be applied to the meter.

TESTING

1. Press and hold until the meter turns on.
2. Tap . Select a sanitizer type. Tap to confirm.
3. Tap . Select a disk series [found on disk packaging]. Tap to confirm.
4. Remove disk from packaging.
5. Use syringe [1189] to fill disk with pool or spa water sample.
6. Insert disk. Cover disk with Universal Disk Cover. Close lid.
7. Tap to start test. Tap to cancel the test.
8. Results will be displayed.
9. Select an option.
 - Tap to add a tag.
 - Tap the highlighted to save the test results to the test log if Auto Save is not enabled.
 - Tap the highlighted to send the results to the enabled Mobile Bluetooth Printer.
 - Tap the highlighted to send the results to a Bluetooth enabled device.
 - Tap to return to the Test Screen.
10. Press and hold for 2 seconds to turn meter off.

NOTE: For water samples over 100 °F [38 °C] subtract 0.3 from pH result or, for the most accurate result, wait until water sample is below 90 °F [32 °C] to test.

DOS & DON'TS

- Hold syringe vertically when filling disks.
- Do not fill disk while in the meter. Fill disk on clean, dry surface.
- The disk should not contain any large air bubbles. Air bubbles will result in erroneous results.
- Only the Universal Disk Cover [Code 1719] can be used with the WaterLink® Spin Touch™.
- Empty syringe of previous sample before filling with next sample.
- Remove filled disk from meter after testing.
- Store disks at 70°-80°F/21°-27°C.

WARNING:
only use the USB cable and wall adapter that are supplied with the kit. Make no substitutions.


BLUETOOTH CONNECTION

The WaterLink Spin Touch is capable of connecting to a Bluetooth enabled device. Transferring results over Bluetooth to a mobile device requires that a mobile app is installed on the device and an active account for the associated software program. Mobile apps for LaMotte software products are available from iTunes (for iOS devices) and Google Play (for Android devices). Learn more about LaMotte software products at <http://softwarecenter.lamotte.com>.


When the connection is available the button will light on the touch screen. When the is dim, the meter and device are not connected. Tap the button to transfer results to the mobile app. Whenever the button appears on the touch screen the Spin Touch is capable of connecting to the Mobile Bluetooth Printer [Code 5-0066]. The button will be highlighted when connected and dim when not connected. The Spin Touch cannot connect to both mobile device and the printer at one time. For more information see the manual.

FILLING: SINGLE-USE DISKS

When the syringe is placed in the water sample, and the plunger is pulled all the way up, the syringe will hold more than enough water sample to adequately fill the disk. Hold the syringe vertically and insert the tip into the fill hole in the disk. Press the plunger slowly and smoothly to fill the disk.

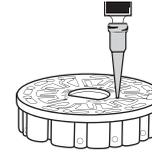


1. Fill the disk using slow, even pressure. The sample water will fill the spaces between the baffles in a counterclockwise order. Each space will fill from the bottom to the top. Sample water should be added until the sample water in the fourth chamber fills **to the top** of the chamber slightly past the embossed fill line. It is OK to fill slightly past the fill line.

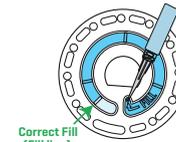


2. Do not overfill the disk. If the disk is overfilled, sample water will flow out of the overflow hole in the center of the disk. The disk is not leaking. Dry the disk and run the test.



3. Do not under fill the disk. If the disk is under filled, the reagent chambers will not fill entirely and results will be inaccurate.

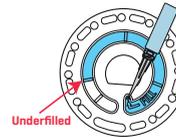

4. Do not introduce air bubbles into the disk. The reagent chambers will not fill entirely and results will be inaccurate. As soon as a bubble starts to form, pull back on the plunger to draw the bubble out of the disk. Begin the filling process again.

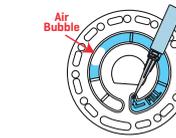

5. Wet disks should be dried thoroughly with a lint free wipe. The disk should be handled by the edges.



6. Disks should be filled and used within 10 minutes. They cannot be filled ahead of time.


For filling and troubleshooting tips go to: www.lamotte.com/spin

FILLING: MULTIPLE-USE DISK


When the syringe is placed in the water sample, and the plunger is pulled all the way up, the syringe will hold more than enough water sample to adequately fill the disk. Hold the syringe vertically and insert the tip into the fill hole in the disk. Press the plunger slowly and smoothly to fill the disk.




1. Fill any unused section of the disk using slow, even pressure. Add the sample water until the Blank Chamber is full and the Over Flow Chamber is partially filled.

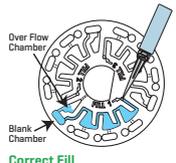


2. Do not overfill the disk. If the disk is overfilled, sample water will flow out of the vent hole in the center of the disk. The disk is not leaking. Dry the disk and run the test.

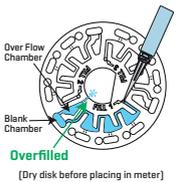

3. Do not under fill the disk. If the disk is under filled, the blank chamber will not be full. The reagent chambers will not fill entirely and results will be inaccurate.

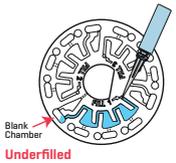

4. Do not introduce air bubbles into the disk. The reagent chambers will not fill entirely and results will be inaccurate. As soon as a bubble starts to form, pull back on the plunger to draw the bubble out of the disk. Begin the filling process again.

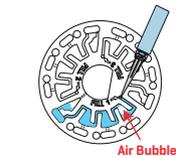

5. Wet disks should be dried thoroughly with a lint free wipe. Handle the disk by the edges. Between tests store the disk on a flat surface. Do not agitate a partially filled disk to avoid leaking and contamination. Partially used disks should be discarded at the end of the day.



6. Disks should be filled and used within 10 minutes. They cannot be filled ahead of time.



PO Box 329 · Chestertown · MD · 21620 · USA
800-344-3100 · 410-778-3100
www.lamotte.com · softwaresupport@lamotte.com

Disk US Patent No. 8,734,734 | FCI US Patent No. 8,987,000
FCI EU Patent No. EP2784503 A1 | TCI US Patent No. 8,993,337
Compatible with iPhone 6 Plus, iPhone 6, iPhone 5s, iPhone 5c, iPhone 5, iPad Air 2, iPad Air, iPad mini 3, iPad mini 2, iPad mini, and iPad (4th generation).
Compatible with Android devices.

