

Code 2963L.R-G

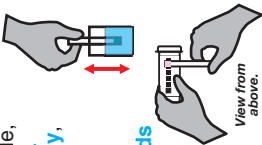
Total Chlorine  **25 Test Strips**

Insta-Test[®] ANALYTIC

Low Range TOTAL Chlorine ppm



Using a cup-size sample, dip strip for **2 seconds**. **Remove strip vertically**, as shown. **DO NOT SHAKE OFF EXCESS WATER**. With pad still vertical, wait **10 seconds** and **read** the strip. Discard strip after 30 seconds.

 *View from above.*

! Keep wet fingers out of the bottle.
! Cap bottle tightly after removing strip.
! Store in a cool, dry place.


LaMotte Company
802 Washington Ave., Chestertown, MD 21620 USA
410-778-3100 • www.lamotte.com



Drop holding box and dotted tolerance line