


Immerse test strip and remove with pad face up. **DO NOT SHAKE OFF EXCESS WATER.** Immediately compare to color chart.

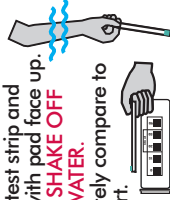

Code 2984



- ! Keep wet fingers out of the bottle.
- ! Close cap tightly after removing strip.
- ! In pools, immerse strip to a depth of 6".
- ! In spas, turn off jets and immerse strip to a depth of 6".
- ! For best results read in natural daylight.
- ! Store in a cool dry place.

LaMotte Company
Chestertown, MD 21620
www.lamotte.com/insta

