

Code 3000HR

High Range
Peracetic Acid
50 Test Strips




Insta-Test® **ANALYTIC**

High Range Peracetic Acid ppm



Using a cup-size sample, immerse strip and remove with **pad face up**. **DO NOT SHAKE OFF EXCESS WATER**. Wait 10 seconds and compare to color chart immediately. Discard strip after 30 seconds.

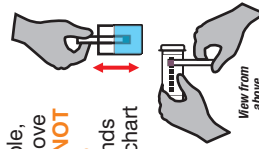

- Keep wet fingers out of the bottle.
- Cap bottle tightly after removing strip.
- Store in a cool, dry place.

LaMotte Company
802 Washington Ave., Chestertown, MD 21620 USA
410-776-3100 • www.lamotte.com



6 37 3951 45182 9

Drop holding box and dotted tolerance line